


How to Change Your Battery

Step 1: Open the Control Panel Box

Open the control panel box, either by removing the screws on the side of the cover or with the control panel key. Note: The photo here does not show all of the internal components and wiring. Your control panel may also look different from this photo.

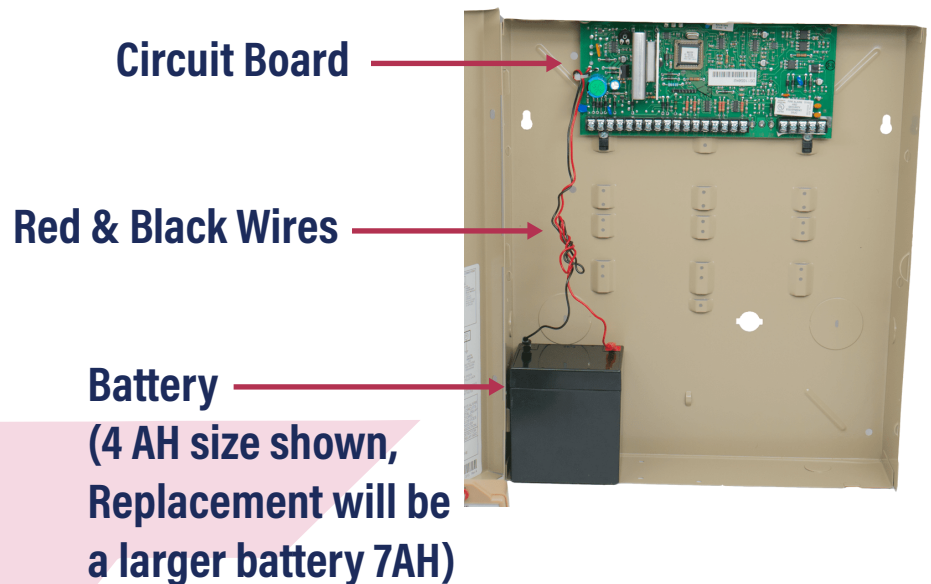

To change your system battery:

Step 2: Disconnect The Old Battery

- Pull the black wire's connector from the negative (-) battery terminal. This may require pliers with electricity insulated handles. The connector may need to be wiggled slightly for it to loosen and become disconnected
- Pull the RED wire's connector from the positive (+) battery terminal. This may require pliers with electricity insulated handles. The connector may need to be wiggled slightly for it to loosen and become disconnected.



How to Change Your Battery

- Remove the old battery from the control panel box. **WARNING: Do not touch any metal objects to the terminals on the battery or to the open-end of the black and red wire connectors.**

Place the New Battery Inside the Control Panel Box

- If the replacement battery has plastic terminal protectors, remove them before connecting the wires to the battery.

- Connect the RED wire to the RED terminal of the new battery by pushing the connector firmly onto the terminal. If you do not see a RED colored terminal, look closely at the top of the battery for a positive (+) terminal.

- Connect the BLACK wire to the BLACK terminal of the new battery by pushing the connector firmly onto the terminal. If you do not see a BLACK colored terminal, look closely at the top of the battery for a negative sign (-) next to the terminal and connect the BLACK wire to the negative (-) terminal.

Done!

There you have it. You're now a pro at changing your security system's control panel battery.